




Welcome

Set Up Manual

1-800-455-1955
www.adsled.com

1

Connect Your Wireless Host Radio to your PC

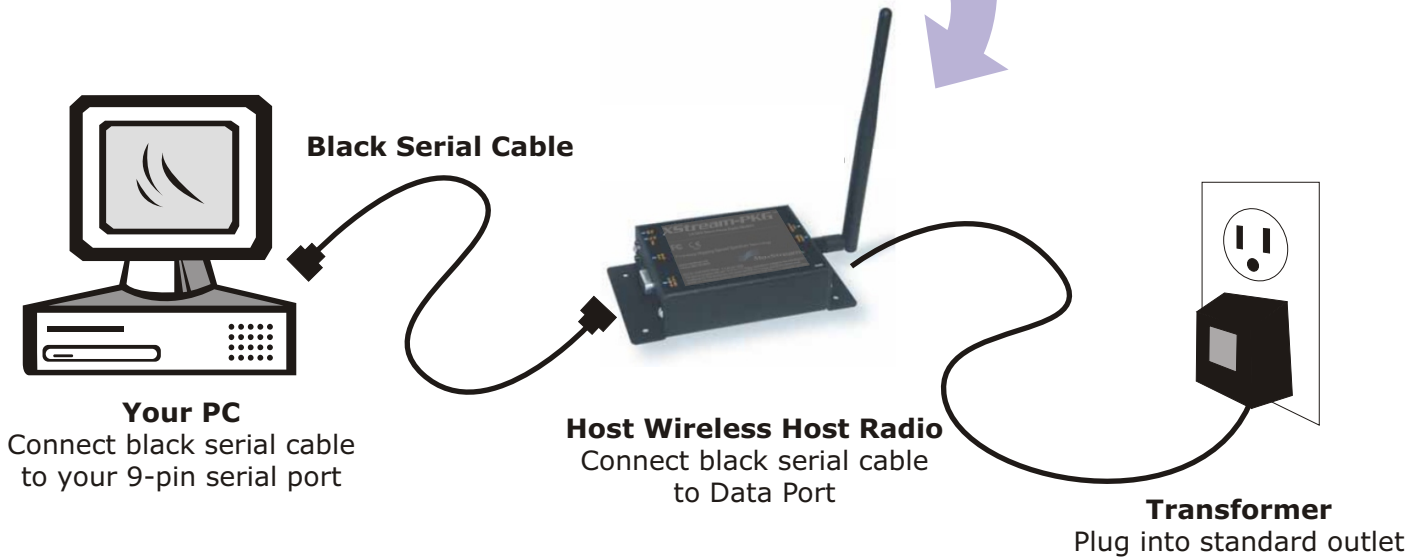

2

Load WinEDT PC Software



1. Close all other programs. Insert WinEDT CD.
2. The software will start itself, read the questions asked, and click NEXT.

3

Configure WinEDT



Double-Click this icon to open WinEDT for Windows

If this icon is not on your Desktop...

Go to START > ALL PROGRAMS > WinEDT > WinEDT for Windows

FIRST, SETUP YOUR SIGN SIZE

1. Click on File > Sign Setup
2. Resolution: **The size of your sign is Width:** _____ **Height:** _____
3. If you have a Single-Line sign, (your height would be 7), please click "7 pixels", otherwise please leave default setting of Normal (8 pixels)
4. Color: Select the appropriate color for the display you ordered.
5. Click OK.

SECOND, LOCATE YOUR DISPLAY

1. Click on Run > Search Com Port

THIRD, CREATE A SIMPLE TEST MESSAGE and PREVIEW

1. Click in the Black Box, which represents your LED Display.
2. Type "TEST"
3. Click in the top White square to the far RIGHT of the Black Box.
4. "Line Presentation Functions" window will open.
5. Under MESSAGE IN FUNCTIONS, click FRAME IN >> (The letter "I" appears in window below)
6. Now, lets determine a speed. Click the number "3" (The number "3" appears in window below)
7. Under MESSAGE OUT FUNCTIONS, click FRAME OUT >> (The letter "I" appears in window below)
8. Now, lets determine another speed. Click the number "6" (The number "6" appears in window below)
9. Click "OK"
10. Click the "P" button above the Black Box. This will PREVIEW your message.
11. Notice the word TEST comes in slow and exits fast.
12. Use other functions and speeds to create your own custom message.



1-800-455-1955

www.adsled.com

Visit us online for email and live chat support